

ISUZU 2 Tons Dump Truck Operation Guidance

1. Pull the hand brake, start the truck engine, press the clutch pedal, **PULL OUT** the PTO button, the PTO is start to make truck hydraulic system working.


PUSH UP Off-Work Position
PUSH DOWN Work Position



2. Use the Hydraulic Valve to control dump body working

PUSH IN:

Hydraulic valve push inside to make dump body lifting up for discharge work

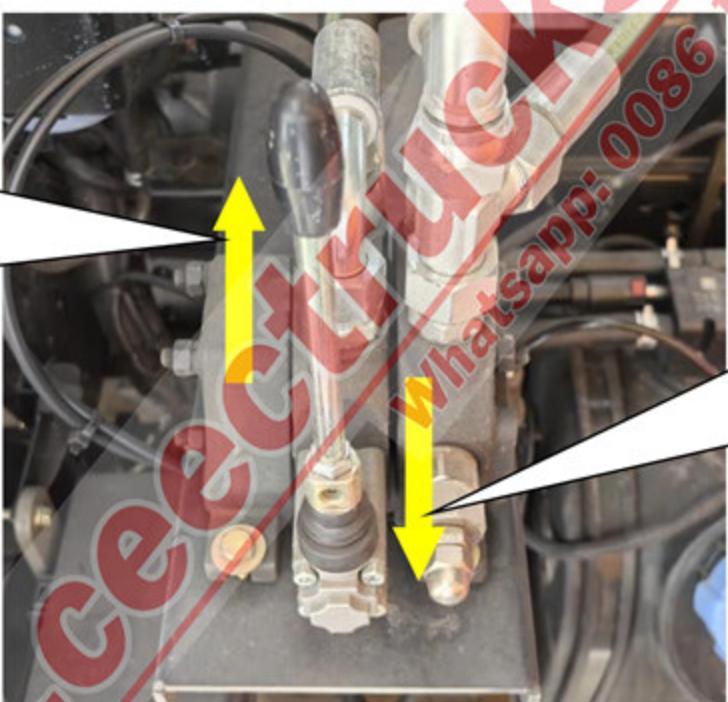

PULL OUT:

Hydraulic valve pull outside to make dump body falling down to reposition

3. Use the Electric Box to control dump body working

Power

Turn to on position to make the electric box start working

TURN to UP

Press to make dump body lifting up

Turn to DOWN

Press to make dump body falling down



4. 24 hours technical support: 0086 155 7227 0555

**CEEC TRUCKS
FOR YOUR SUCCESS**